

PARTS LIST & DIAGRAM

Part No.	Description	Part No.	Description
1	Rubber feet A	49	Star type knob
2	Rubber feet B	50	Block A
3	Support A	51	Block B
4	Water tank	52	Rotate frame B
5	Ratchet lever	53	Pan head screw M5x20
6	Support B	54	Rotating pointer
7	Washer 8mm	55	Spacer
8	Hex head screw M8x20	56	Guard segment
9	Working table	57	Outer guard
10	Basin Table	58	Blade lock nut M16L
11	Scale rail A	59	Outer flange
12	Scale rail B	60	Blade
13	Scale A	61	Inner flange
14	Scale B	62	Guard
15	Hex head screw M6x25	63	Pan head screw M8x25
16	Washer 6mm	64	Hex head screw M6x14
17	Wing Nut	65	Water protection plate
18	Bolt guide	66	Plate
19	Knurled knob	67	Wing Nut M6
20	Gauge segment	68	Flat washer 5mm
21	Pointer	69	Pan head screw M5x16
22	Washer 4mm	70	Triangle plate
23	Pan head screw M4x8	71	Hex head screw M6x12
24	Miter gauge	72	Push lever
25	collar	73	Hex head screw M8x30
26	Star type knob	74	Water outlet
27	Rotate center pin	75	Motor
28	Rotate frame A	76	Push lever gloves
29	Hex nut M8	77	Spacer
30	Water plug	78	Bearing 6000Z
31	Hex head screw M6x16	79	Rod
32	Hex nut M6	80	Spring
33	Hex head screw M6x20	81	Motor support
34	Holding handle	82	Circle ring 9
35	Hex head screw M8x25	83	Bearing 609Z
36	Spring washer 8mm	84	polar
37	Working head rail	85	Lock nut M8
38	Rail scale	86	Pointer
39	Pan head screw M5x12	87	Washer 6mm
40	Spring washer 5mm	88	Spring washer 6mm
41	Washer 5mm	89	Pan head screw M6x12
42	Bracket chain	90	Switch
43	Chain	91	Thread
44	Sunk head screw M4x8	92	Triangle plate
45	Power cable	93	Lock nut M5
46	Water hose		
47	Cable pump		
48	Water pump		

